


Grommet Snap



Connector for PreVent® Equipment Protection Filters

Extra large air intake applications utilize two or more PreVent screens for full intake coverage. Black plastic snaps (fits standard 3/8" grommet) are available to combine or overlap the inside vinyl edge of our Model U or Model BHA filters for a smooth and secure installation.

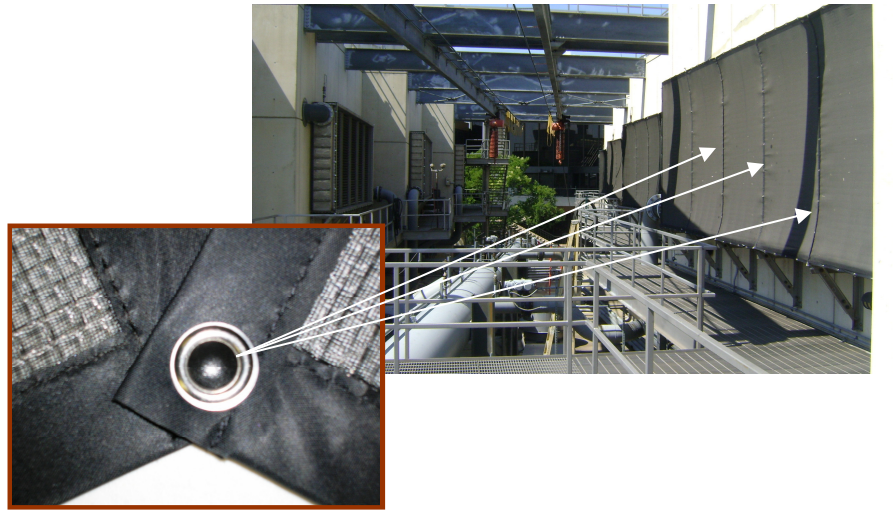

Snap Installation Instructions

1. Screens should be ordered with matching grommets on hook up sides.
2. Line up the screen sides to match up grommets.
3. Insert grommet snap through the top screen and press firmly into the bottom screen.
4. Complete connection by inserting snaps on remaining inside vinyl edge grommets.

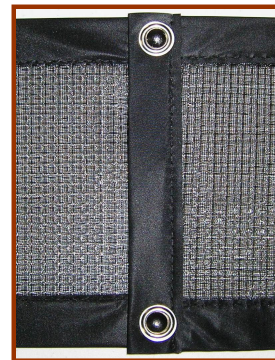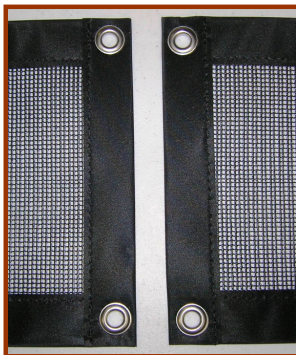

PERMATRON®

www.permatron.com

1-800-882-8012